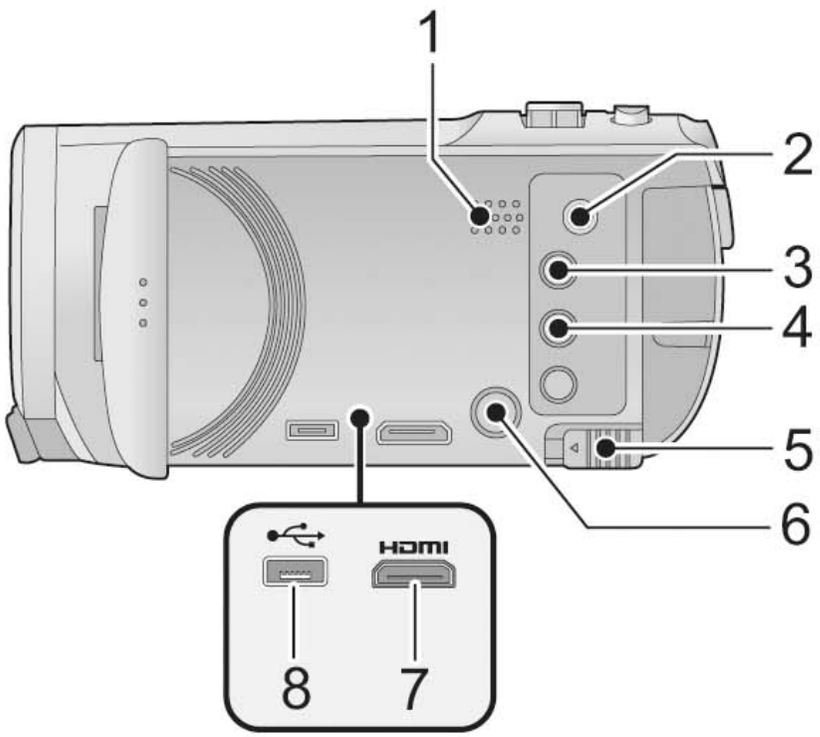

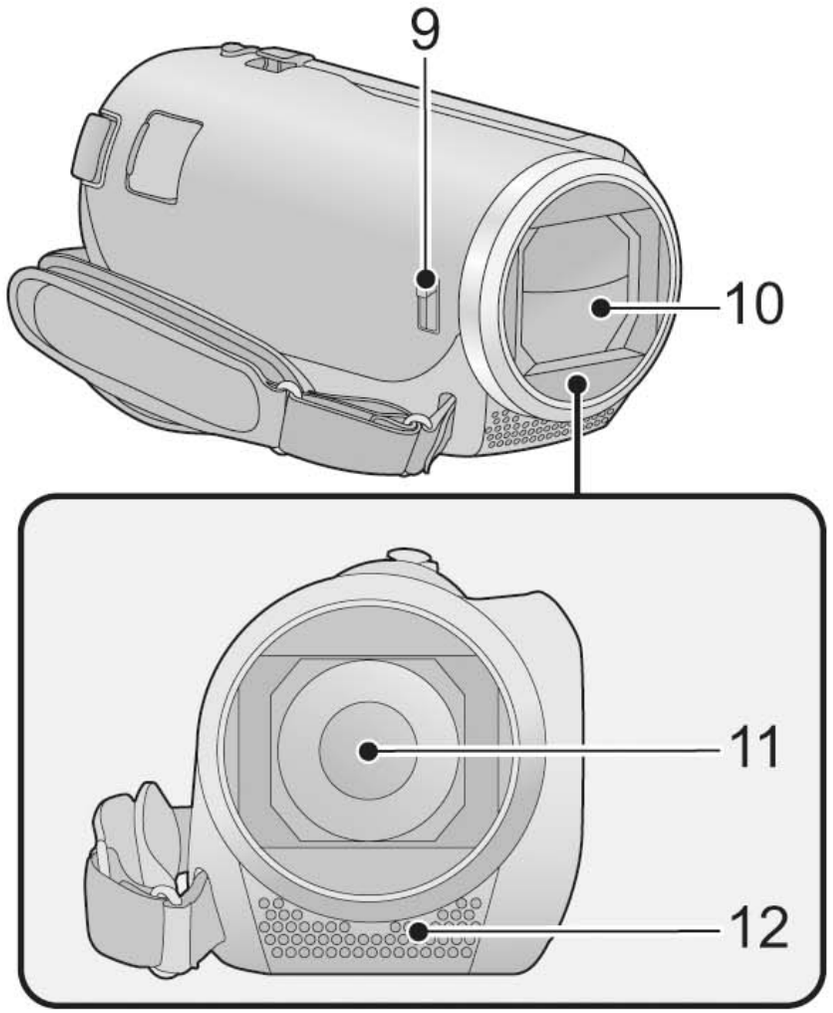

1 **Speaker**
2 **A/V connector [A/V] (➜ 95, 108)**
3 **Recording/playback button [/] (➜ 16)**
4 **Level Shot Function button [ ] (➜ 39)**
5 **Battery release lever [BATT] (➜ 10)**
6 **Power button [⏻/I] (➜ 15)**
7 **HDMI mini connector [HDMI] (➜ 95)**
8 **USB terminal [ ] (➜ 100, 106, 166)**

9 **Lens cover opening/closing switch**

When not using the unit, close the lens cover to protect the lens.

- Slide the opening/closing switch to open/close the cover.

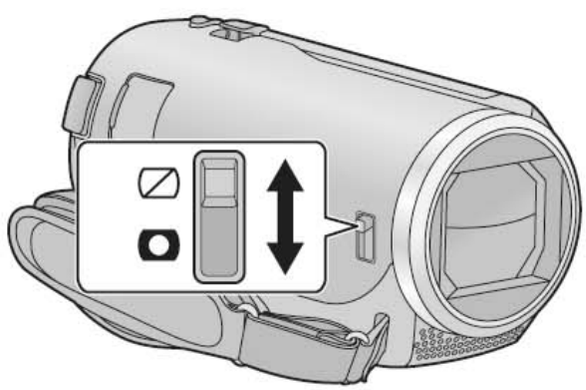

10 **Lens cover**
11 **Lens**
12 **Internal stereo microphones**